

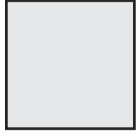




1. bind long edges of each panel with hem tape

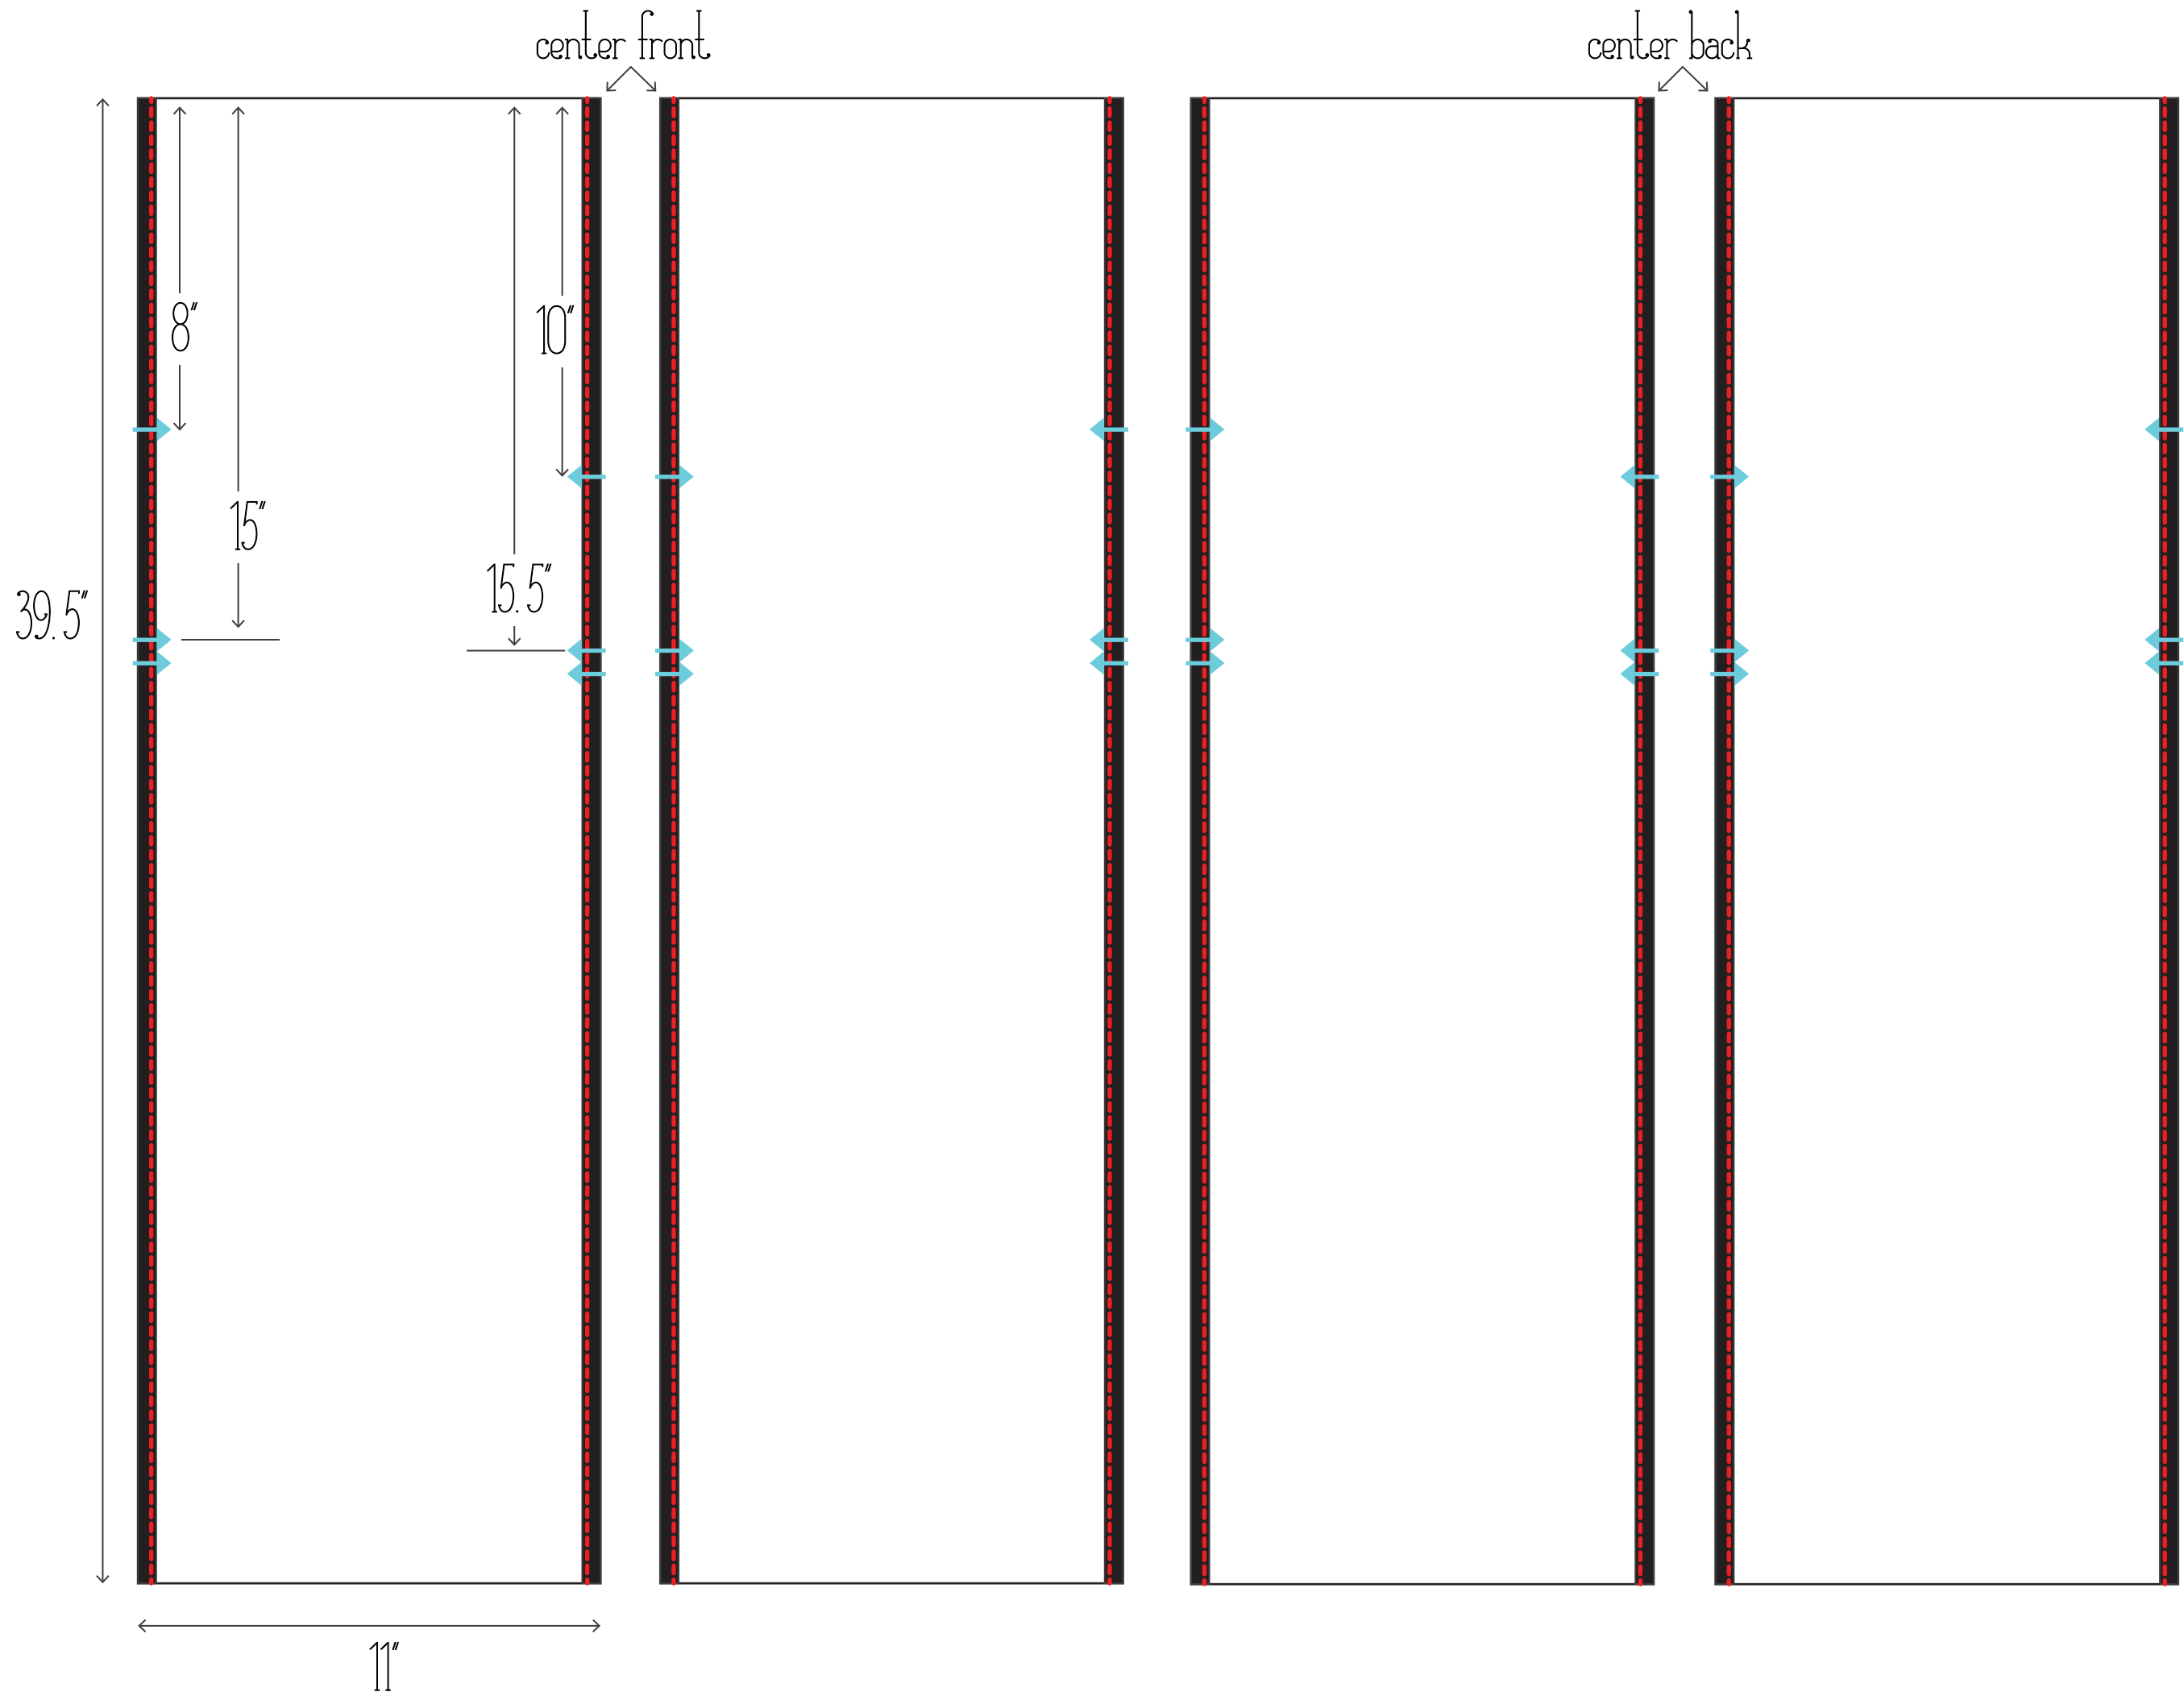

2. shoulder seams

-  right side of fabric
-  wrong side of fabric



0.5" seam allowance:
bind seam allowance with hem tape,
and press towards front panels

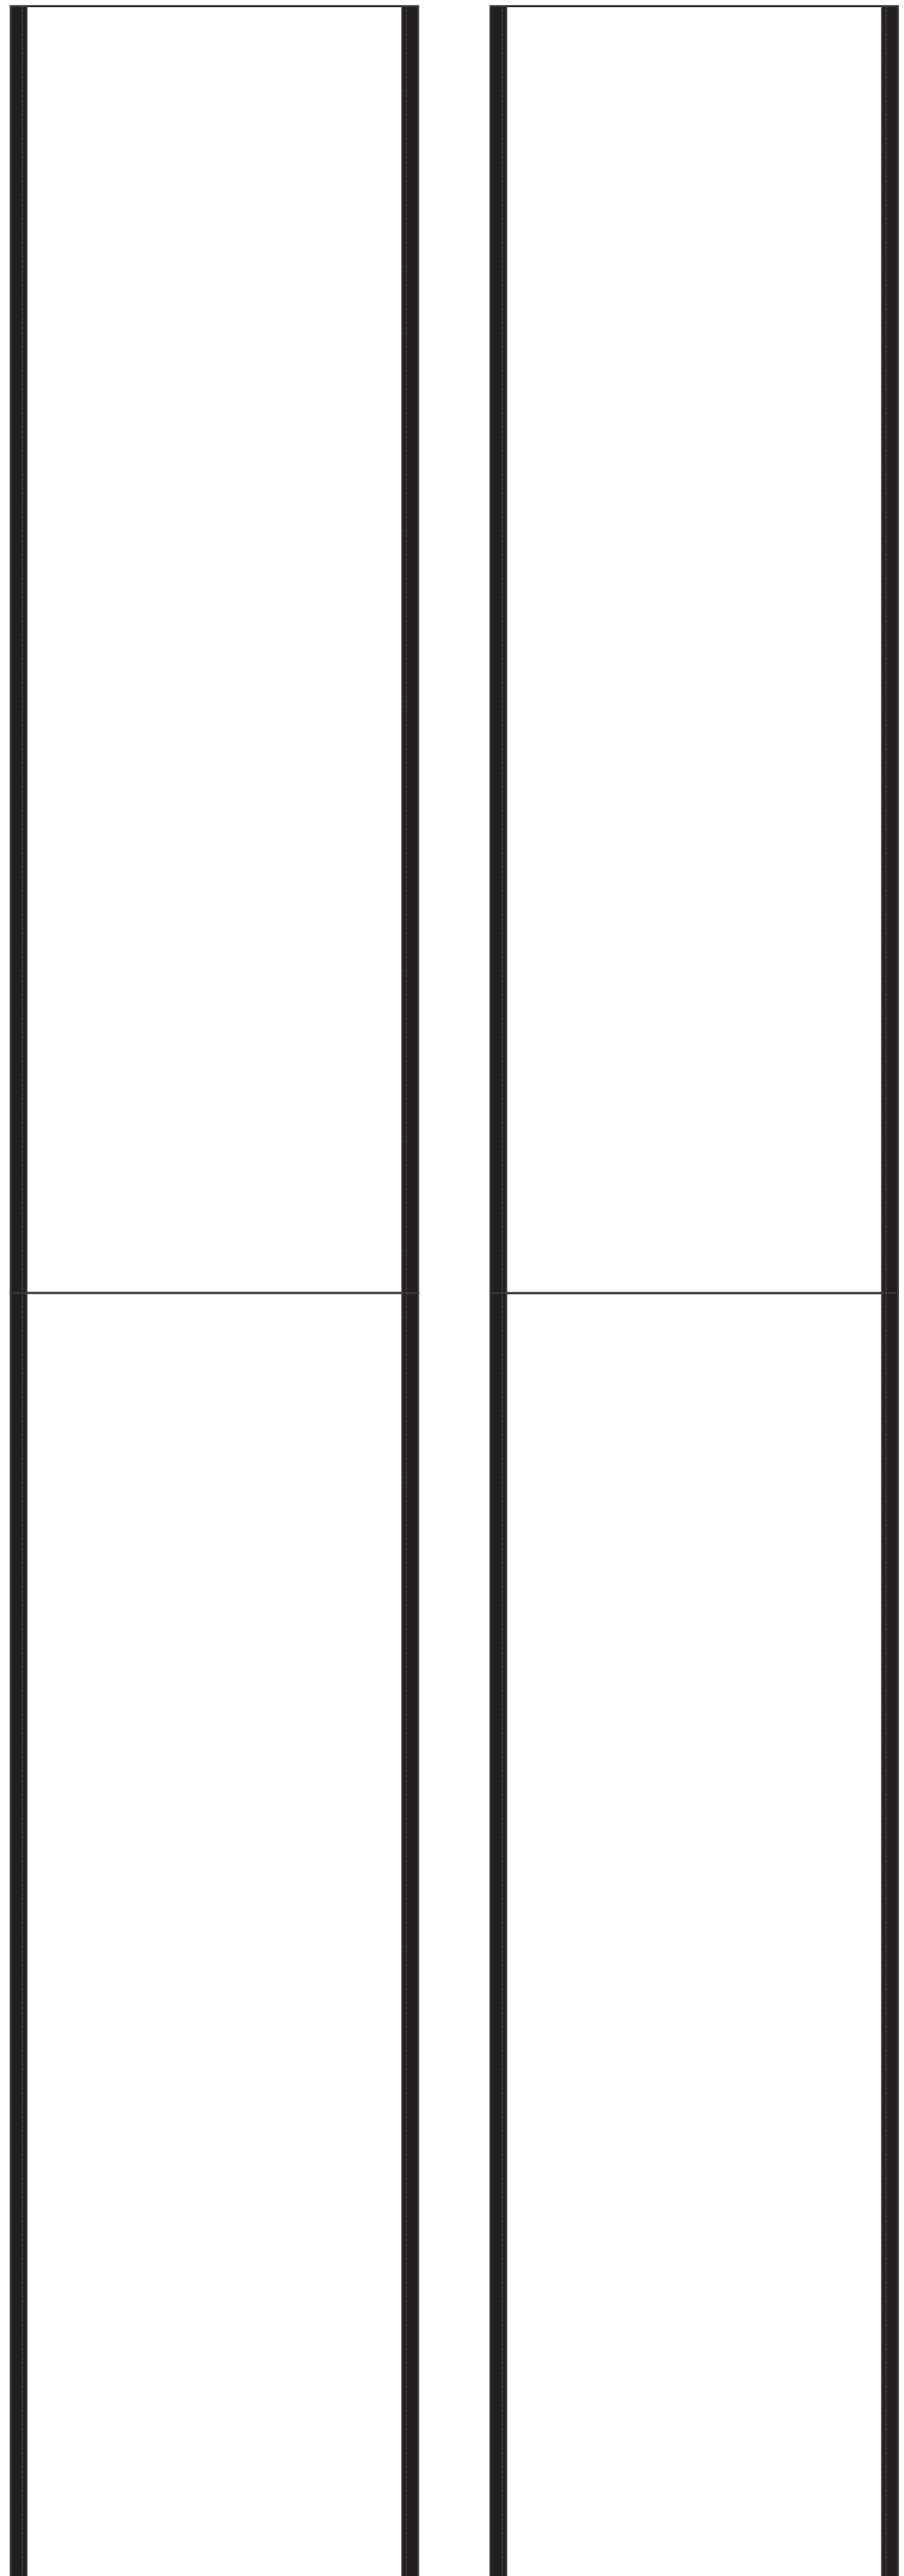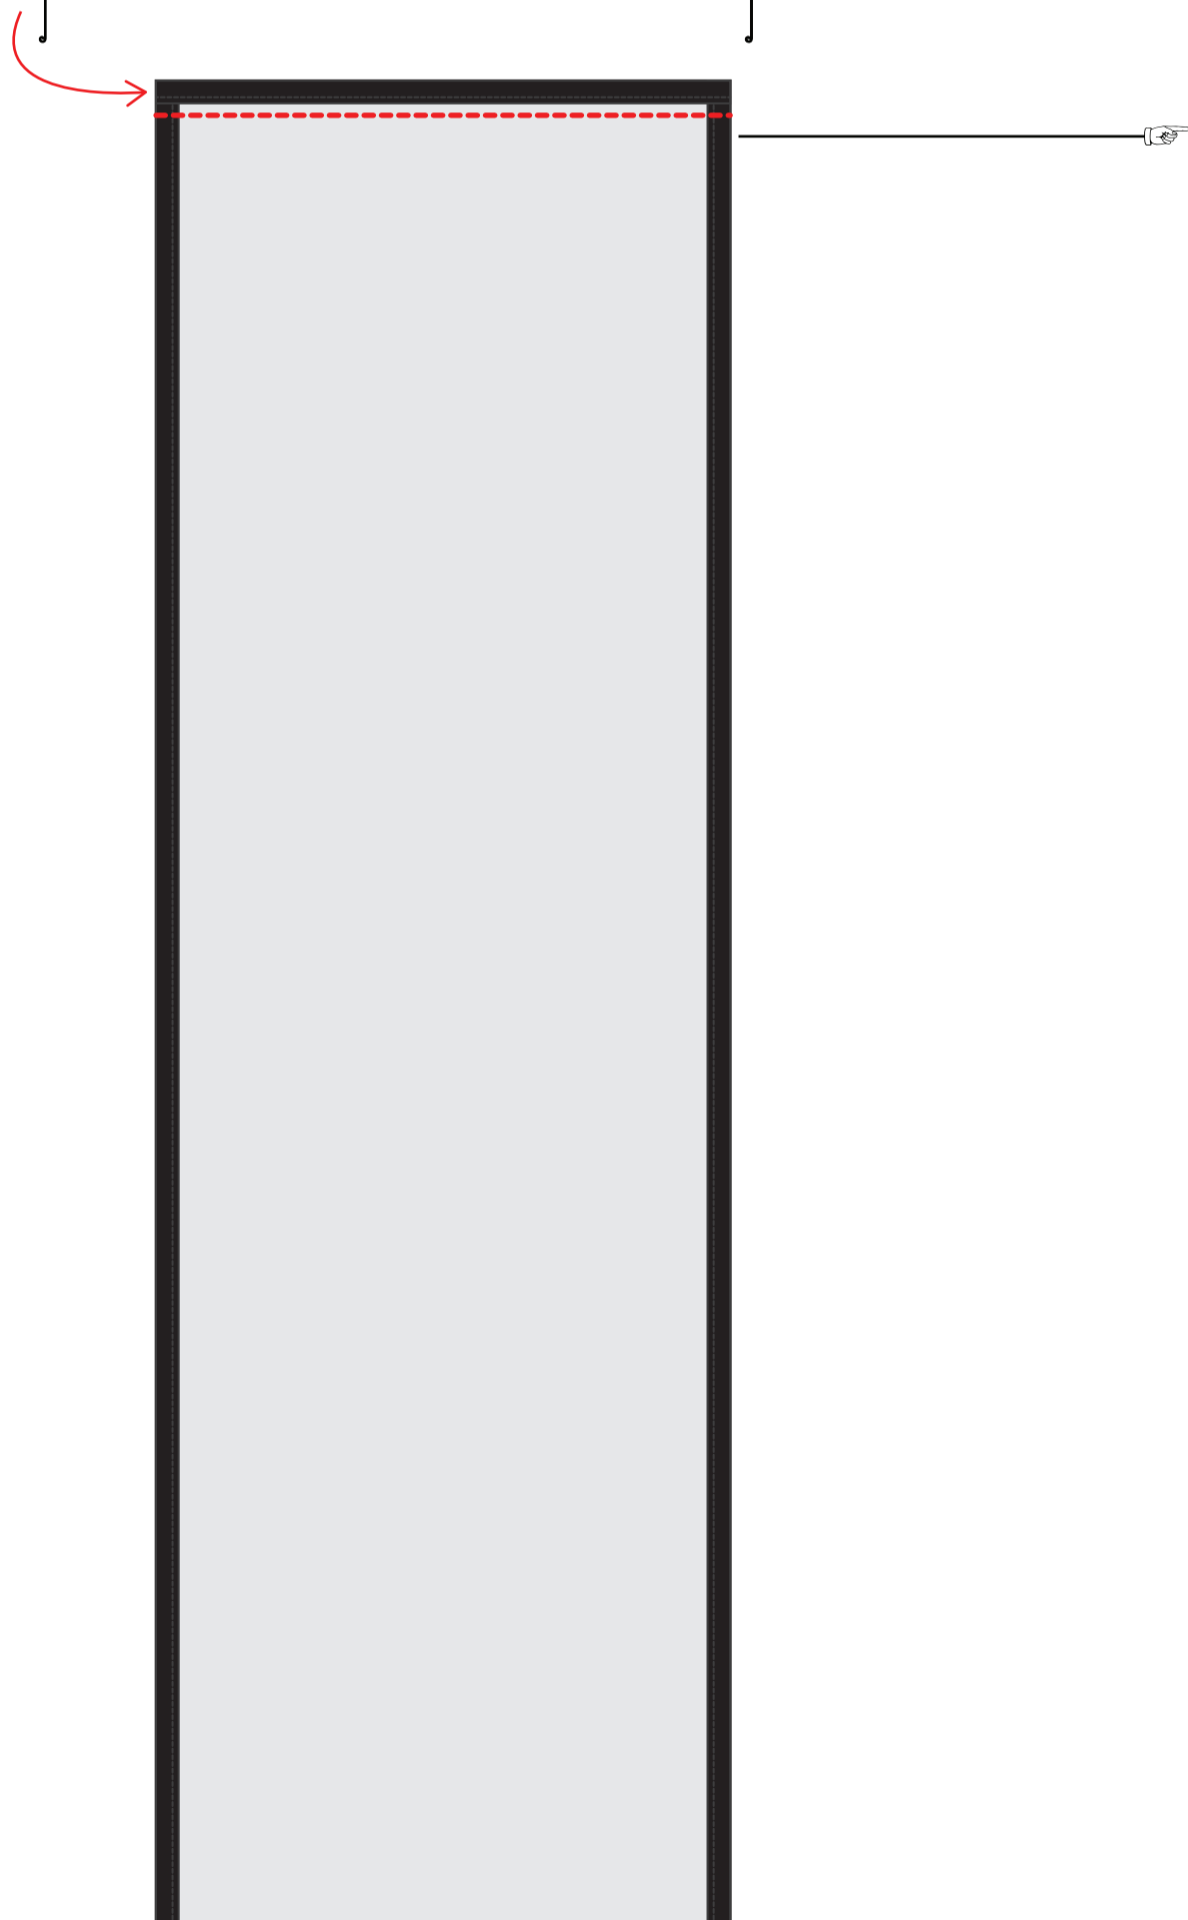

3. front and back center seams

0.5" seam allowance

interior view

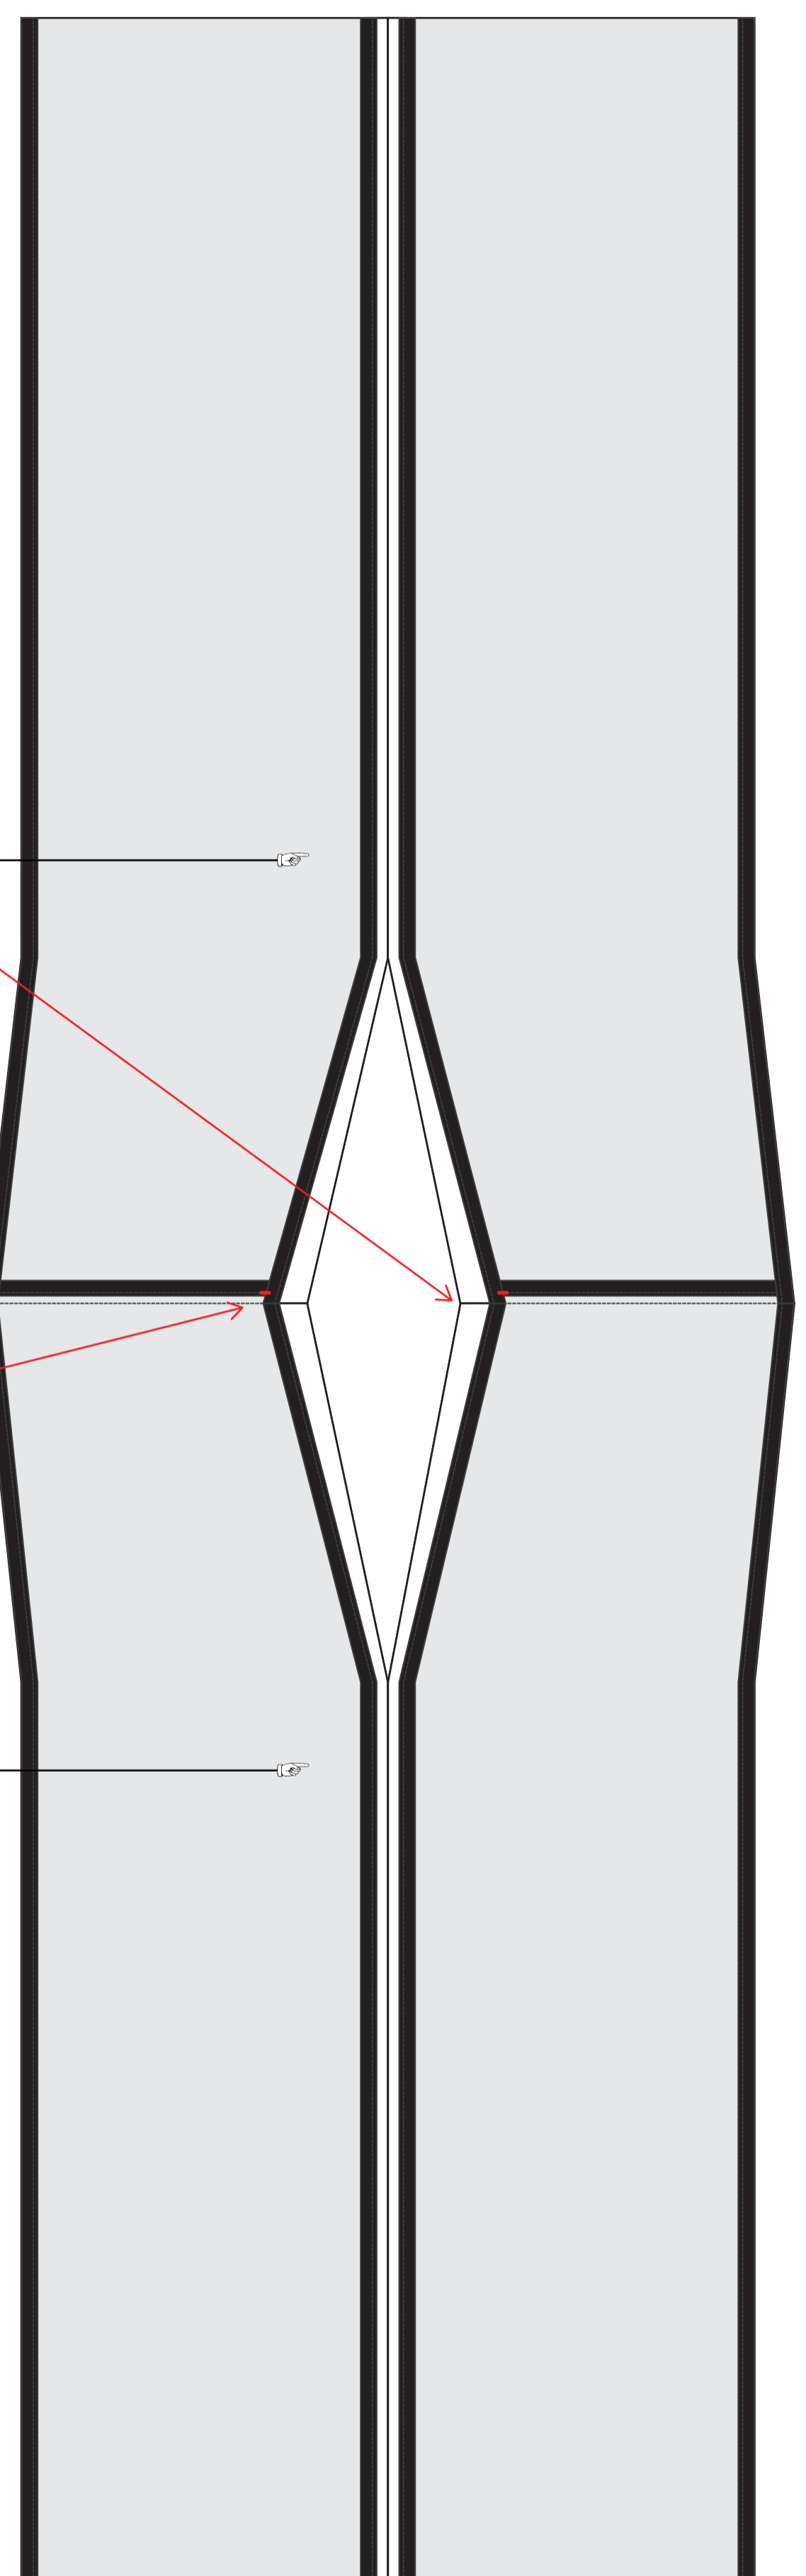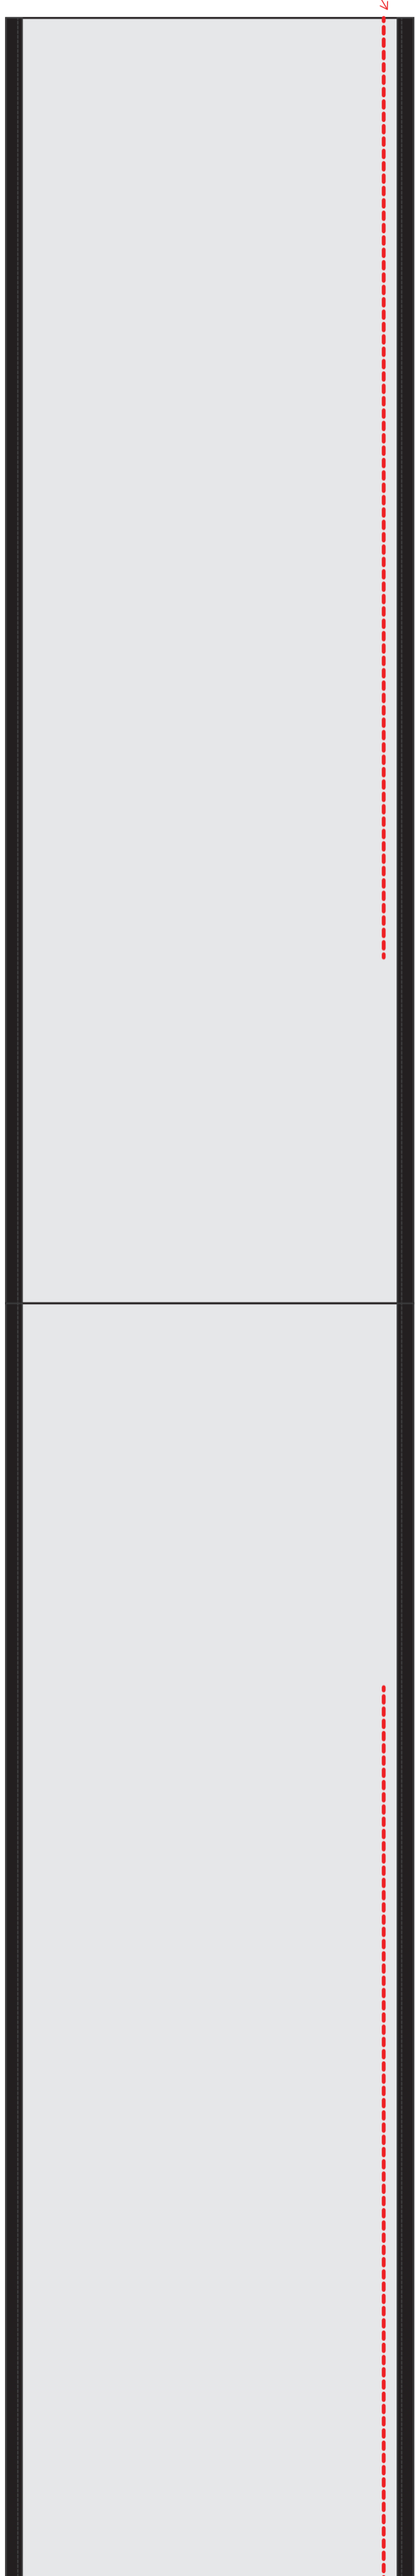

press the neck opening
in 1" at shoulder seam

tack stitch seam

allowance to shoulder

seam binding

4. side seams


tack stitch seam allowance

to shoulder seam binding

press the armhole
openings 1" in at
shoulder seams


0.5" opening in side
seams at waistline

0.5" seam allowance

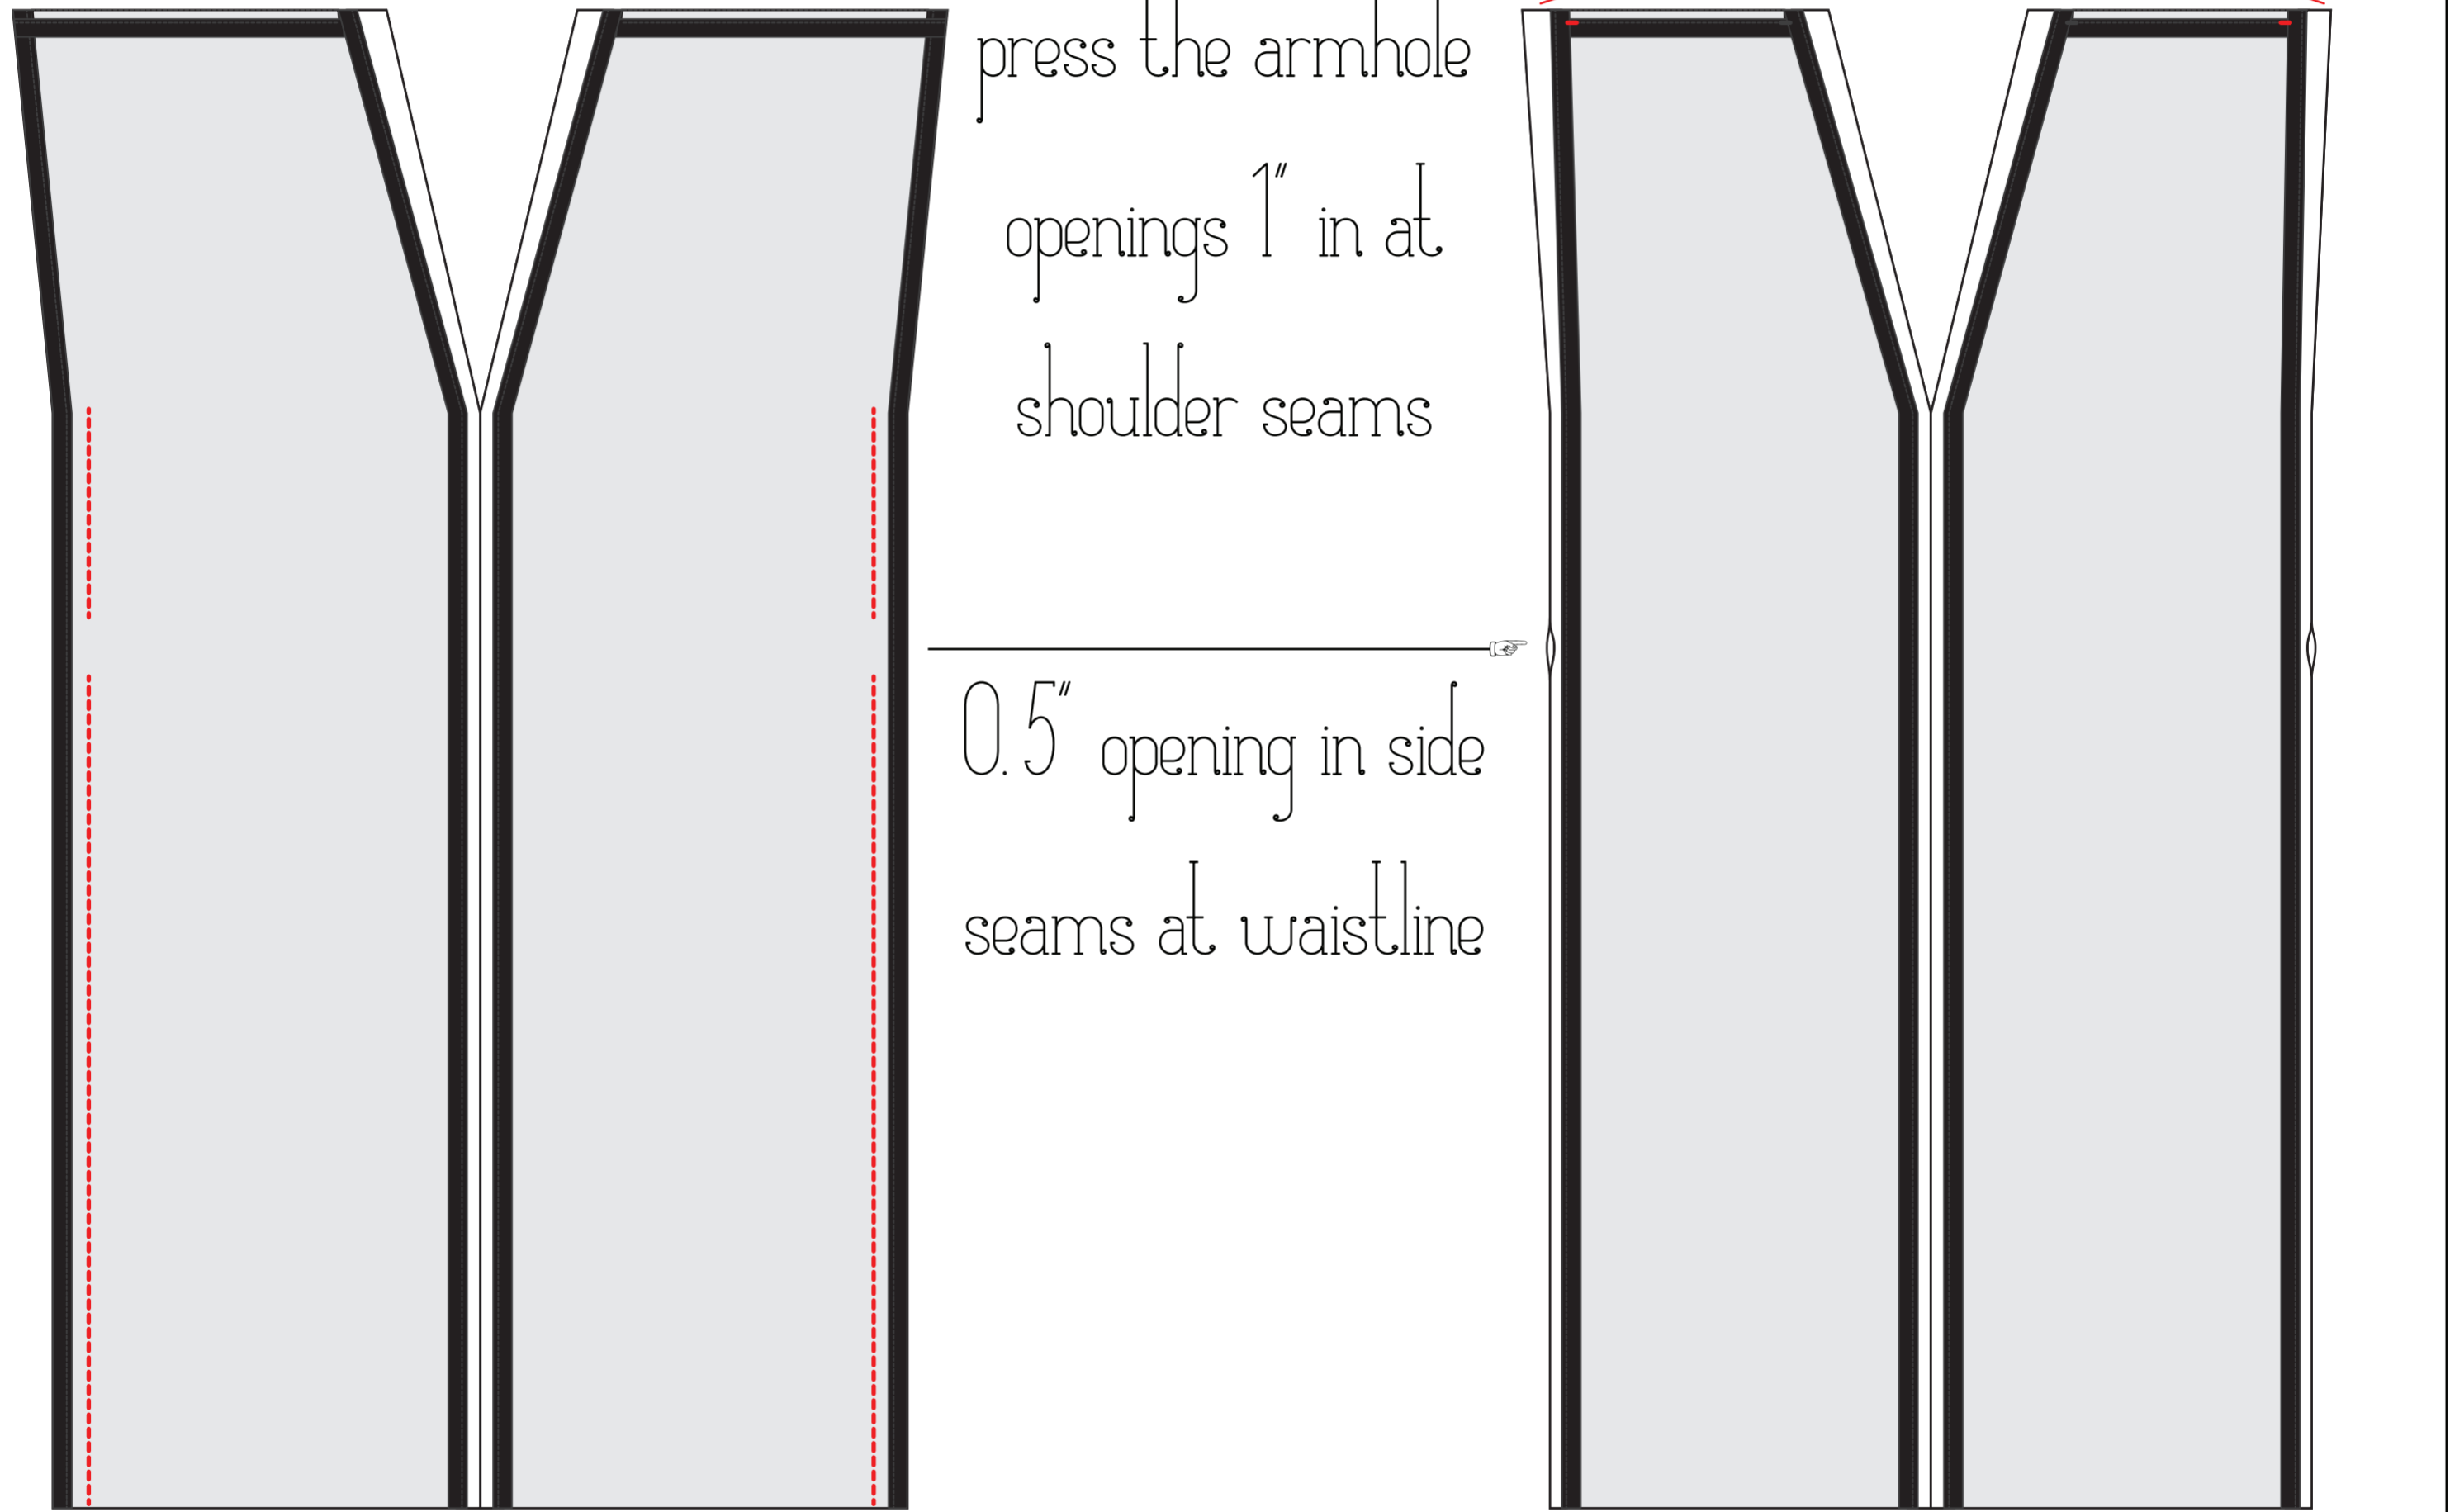


5. wasitband channel

fold in the ends of
the binding to create a
clean edge at side seams

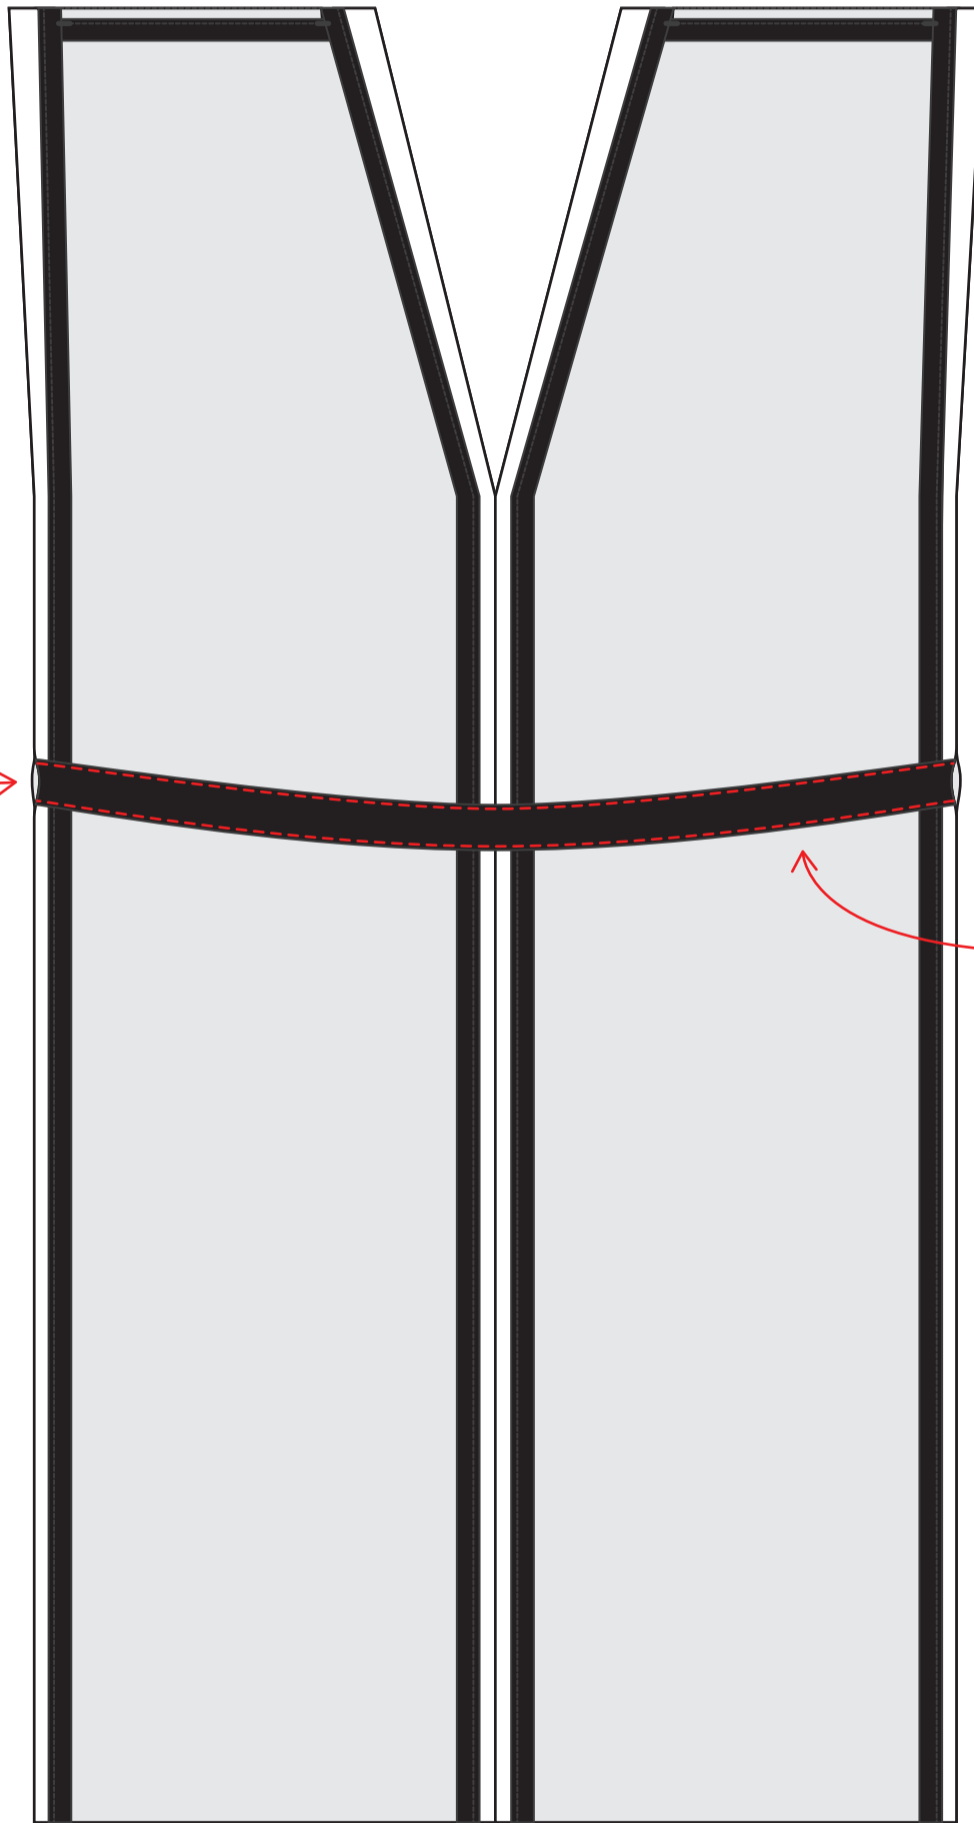


be careful not to
catch the other side
of the garment while
stitching the channel

6. hem

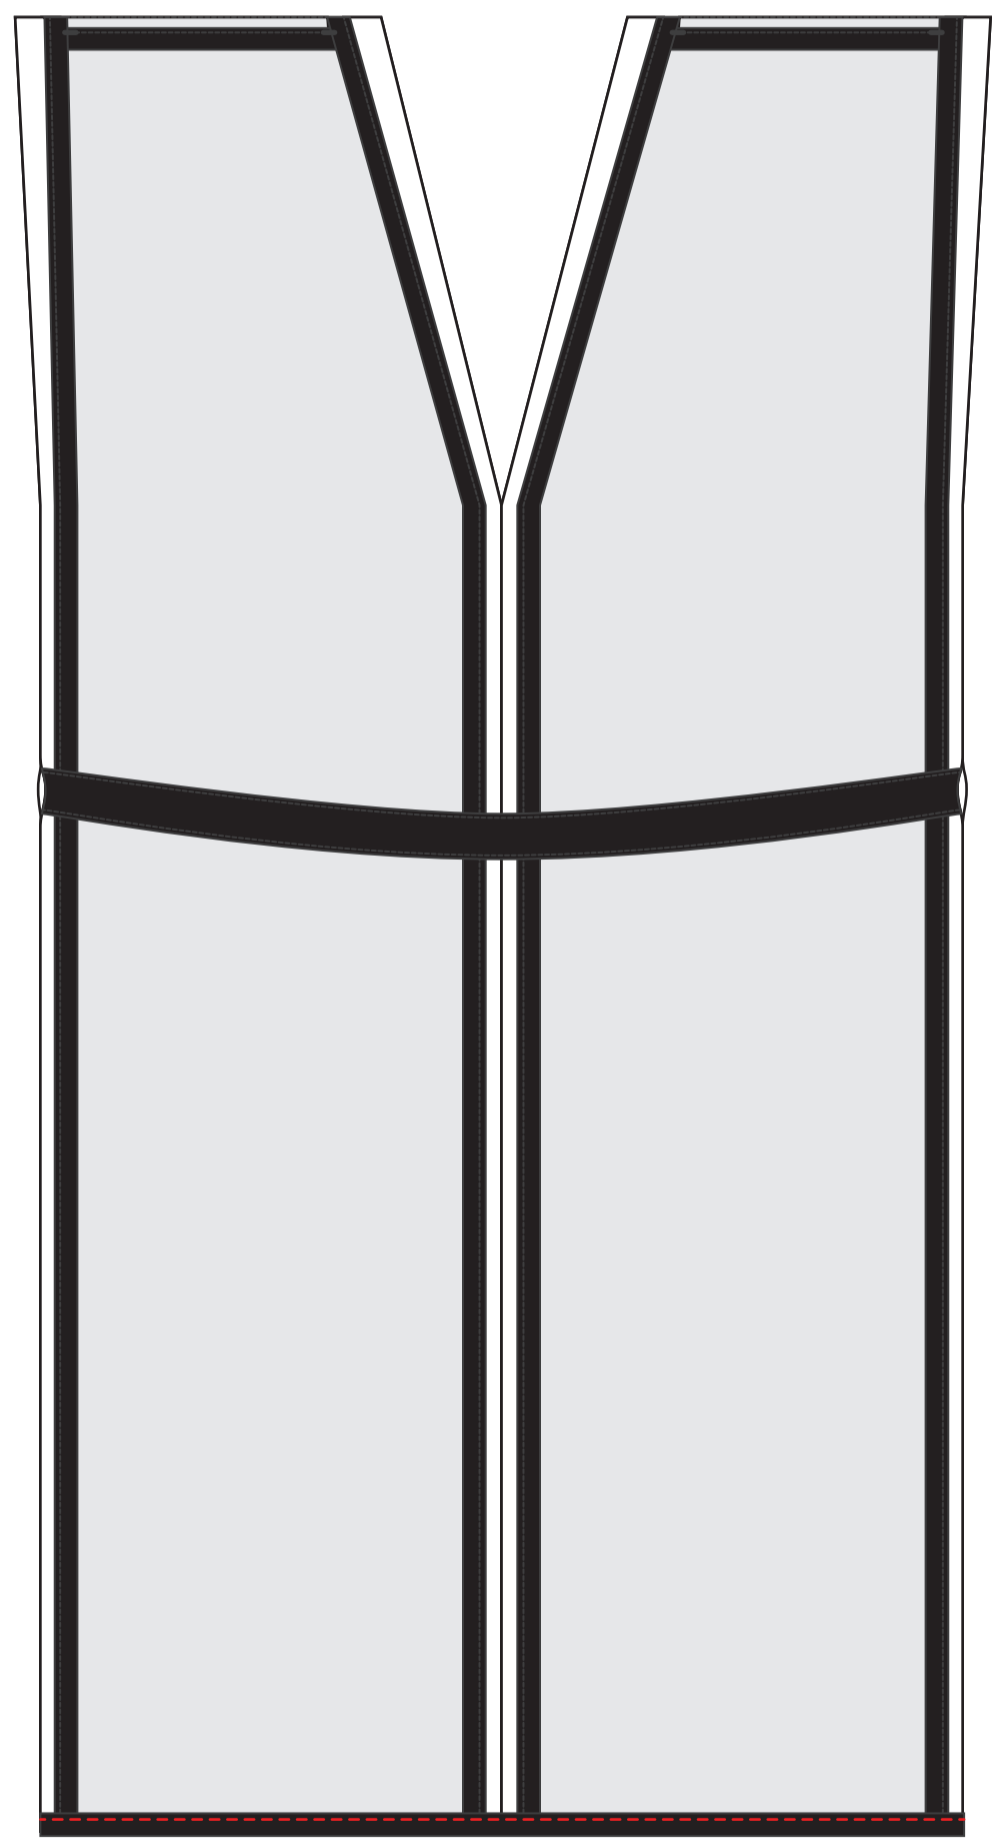

bind the bottom edge

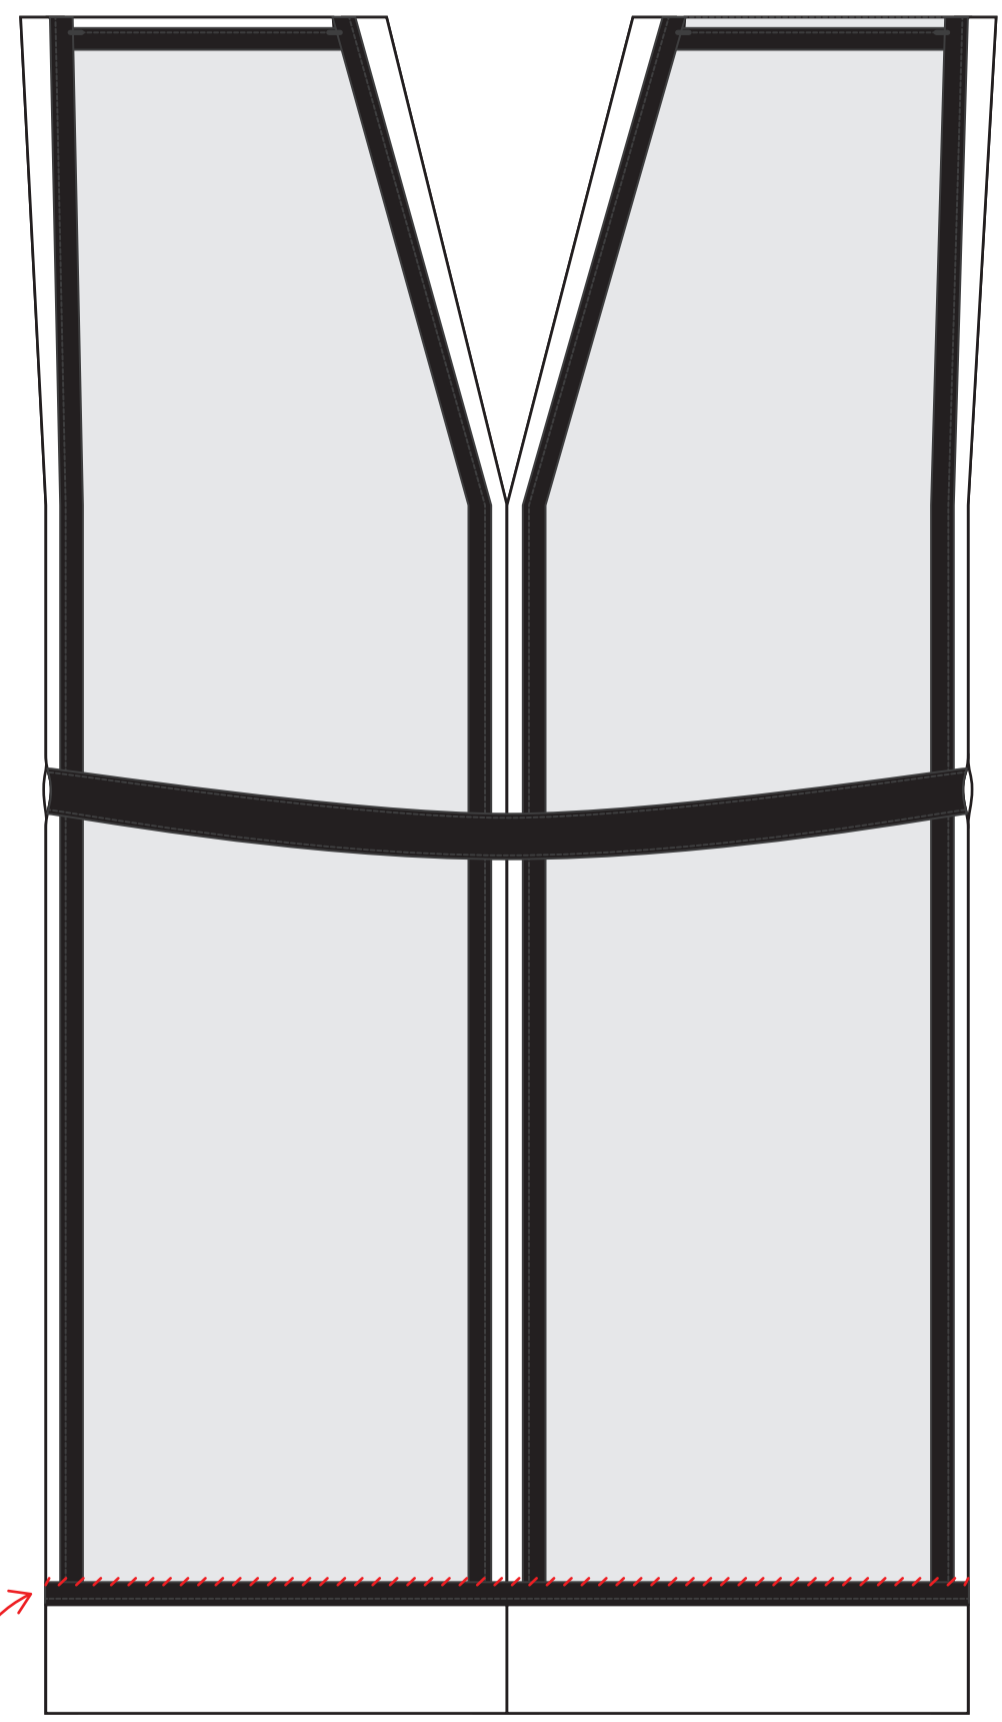

fold up the hem and hand stitch